




INSTALLATION INSTRUCTIONS

安装示意图

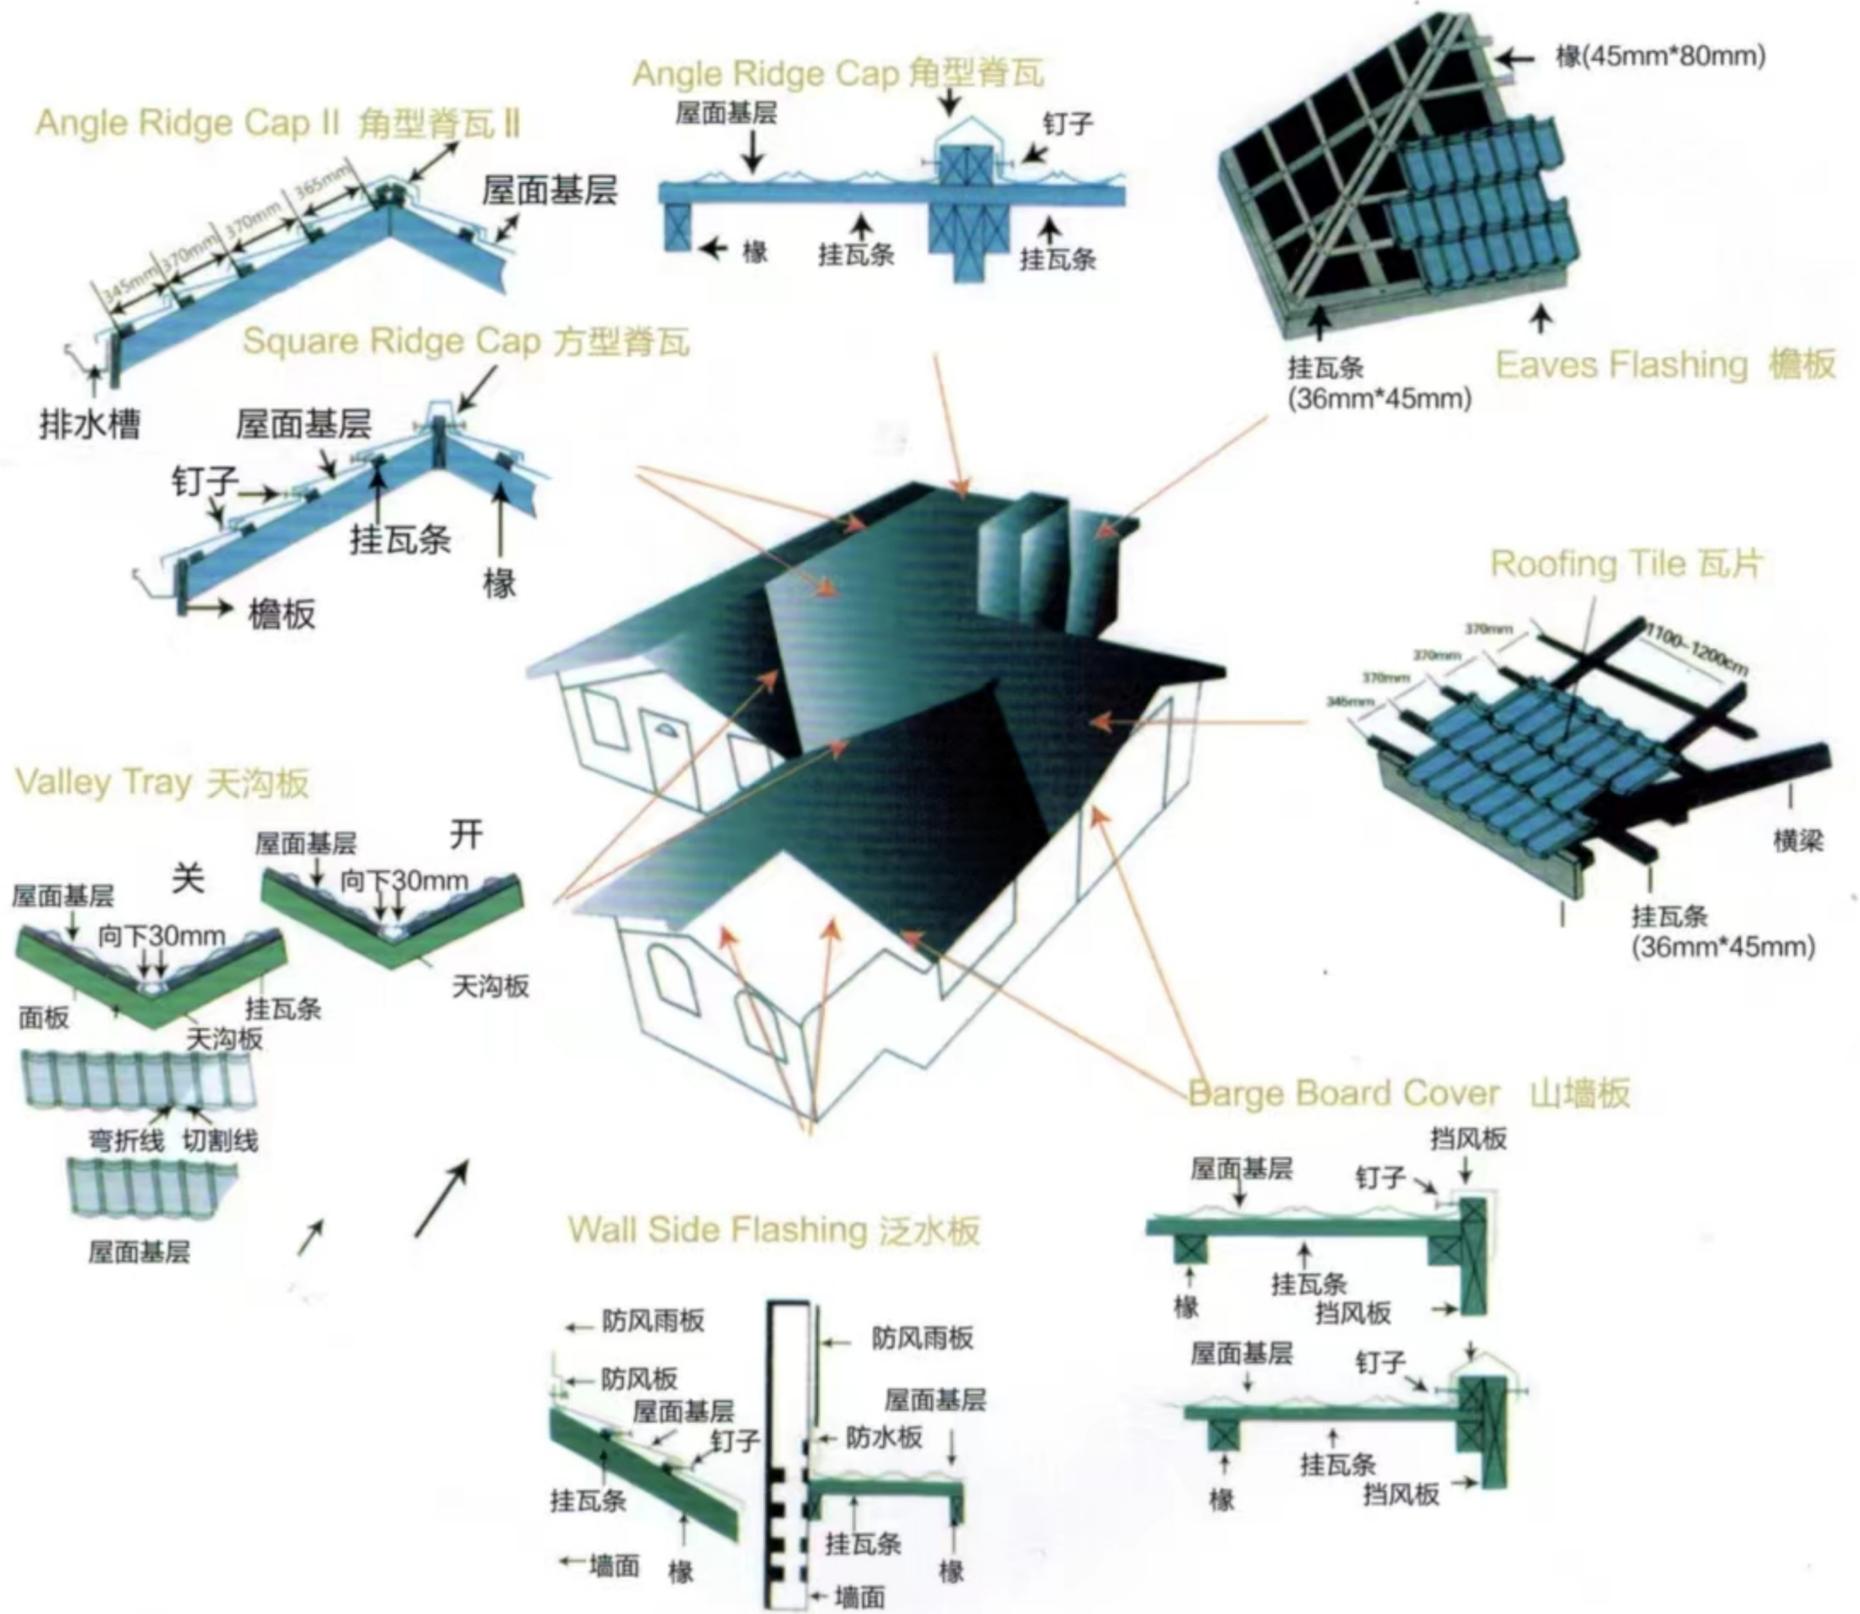



Tools
工具



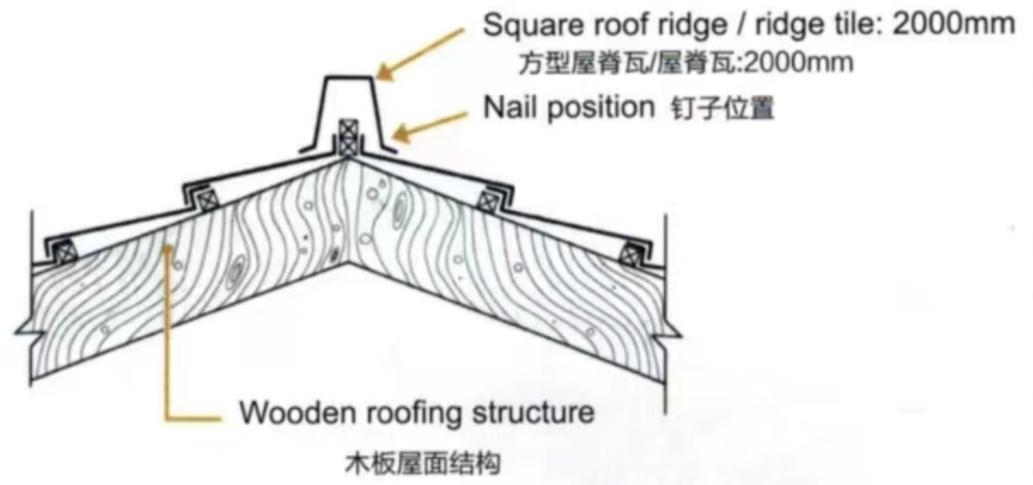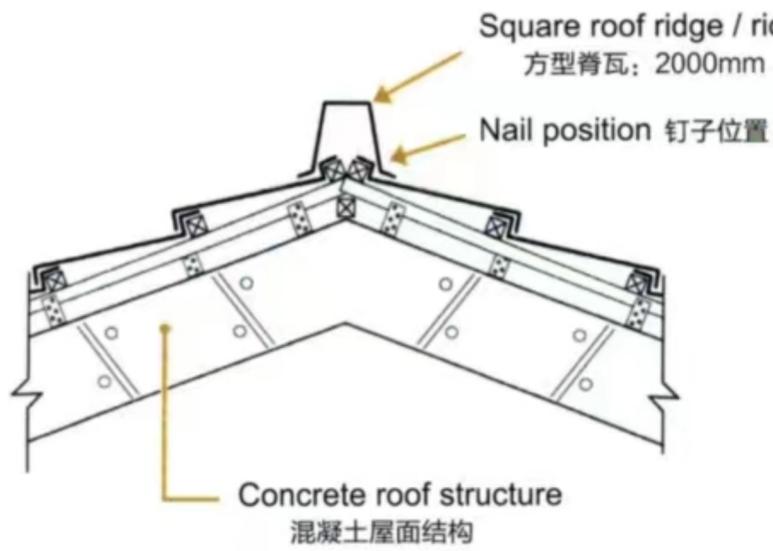


Installation of 2000MM square roof ridge / ridge tile
2000MM方形屋脊瓦安装

B. Roof and surface treatment
屋顶表面处理

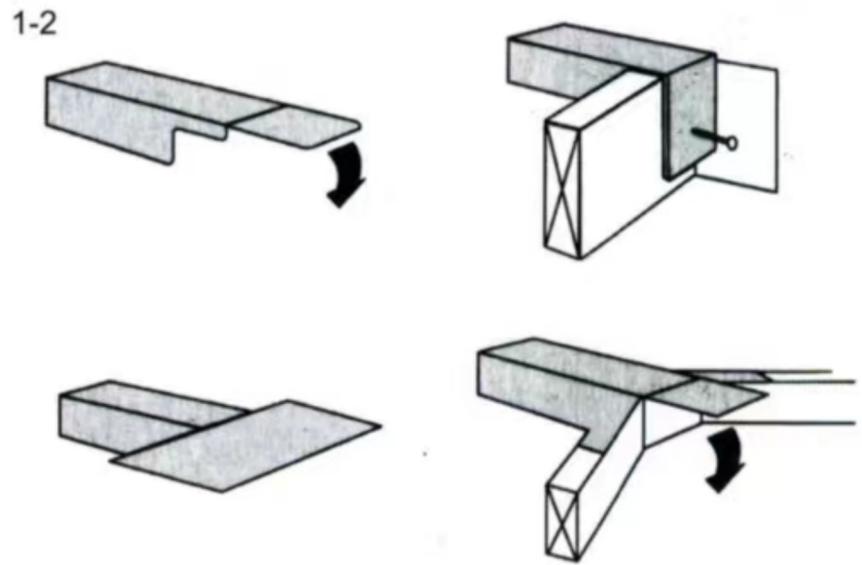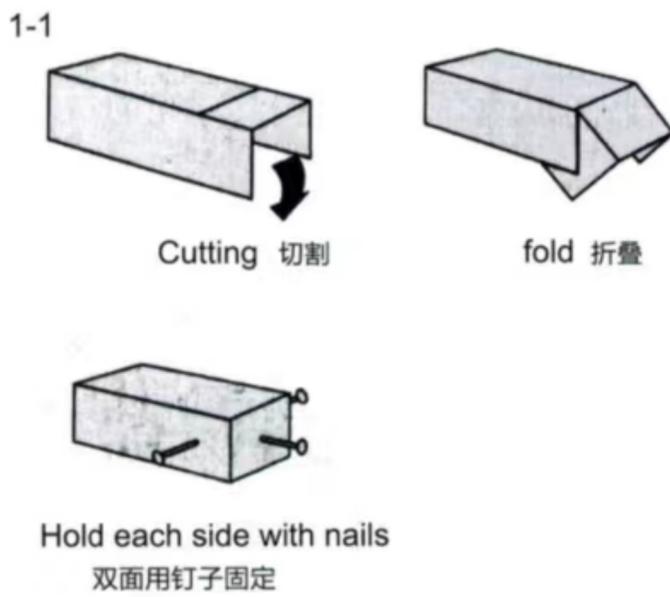


2. Install 420MM of semi-circular roof / ridge tile
半圆形屋脊瓦安装

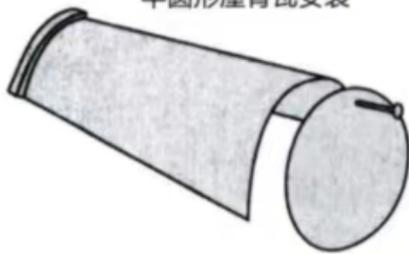

The end is covered with a semi-circular seal and fixed
尾部覆盖半圆型密封材料


3. Install the 2000mm V-shaped roof
角形屋脊瓦安装

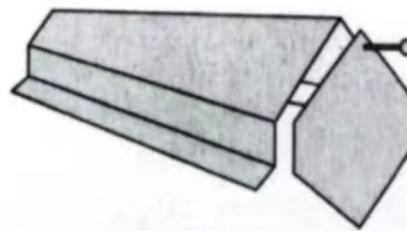


The end is covered with a V-shaped seal and fixed
尾部覆盖V形密封材料

C. Bond tile, classic tile, shingle tile, roman tile,
wood tile type color stone metal tile spatial distribution
圆弧瓦、斜边瓦、方格瓦、彩虹瓦、木纹瓦的空间分布


Watt A and tile B overlap (lap side) The end of the tile edge (tile end)
A瓦与B瓦重叠 瓦边

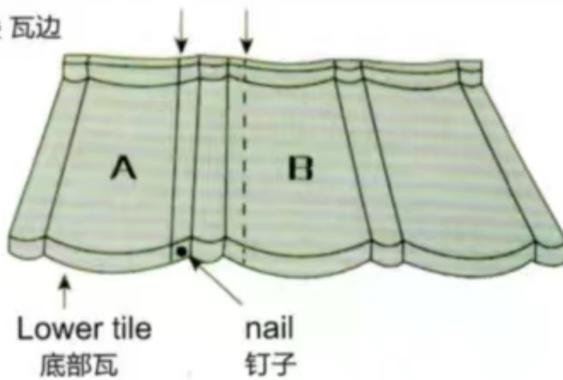

Watt A and tile B overlap (lap side) The end of the tile edge (tile end)
A瓦与B瓦重叠 瓦边

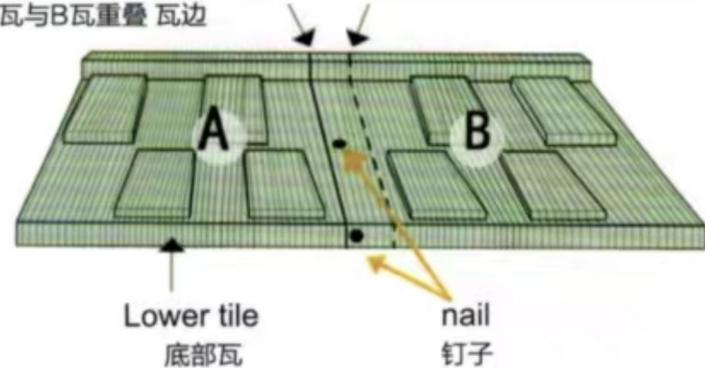



fastener
固件

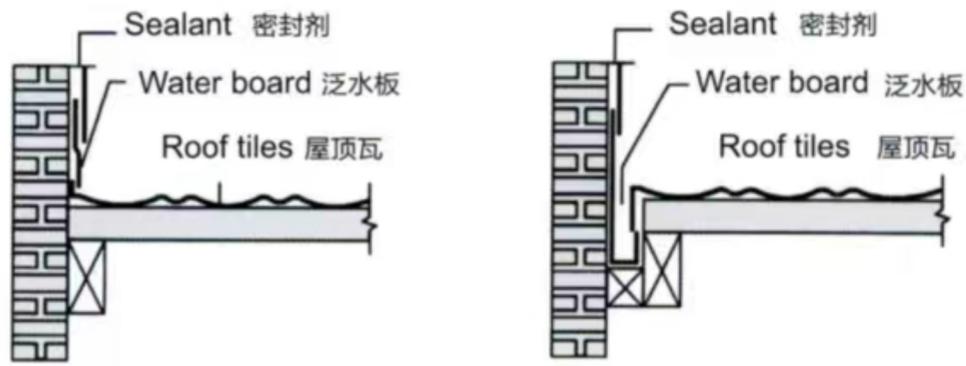

G. Barge Board Cover 山墙板

- When using the water board, install the battens on the rafters and adjust the position of the windshield and battens.
- The edges of the roof tiles are bent so that they can be inserted into the interior of the water pan to prevent leakage.


使用防水板时，先安装挂瓦片和椽，然后调整防风板和挂瓦片的位置 屋顶瓦的边缘弯曲，以便与插入水槽内部，防止漏水。

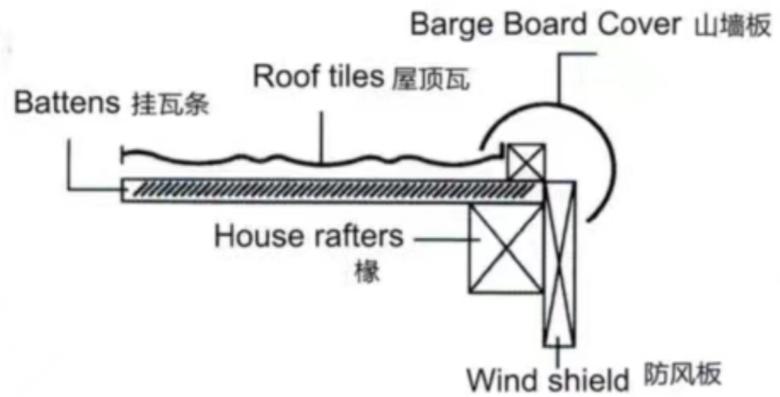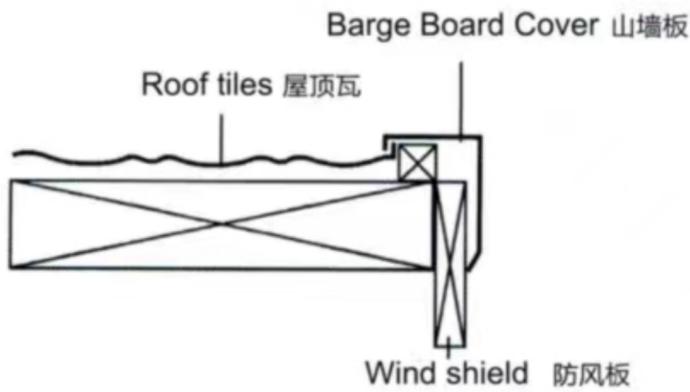


H. Valley Tray 天沟板

It should bend the flat sheet if the drainage channel without flashing designing.

如果落水管没有遮雨板，则需要将平板折弯

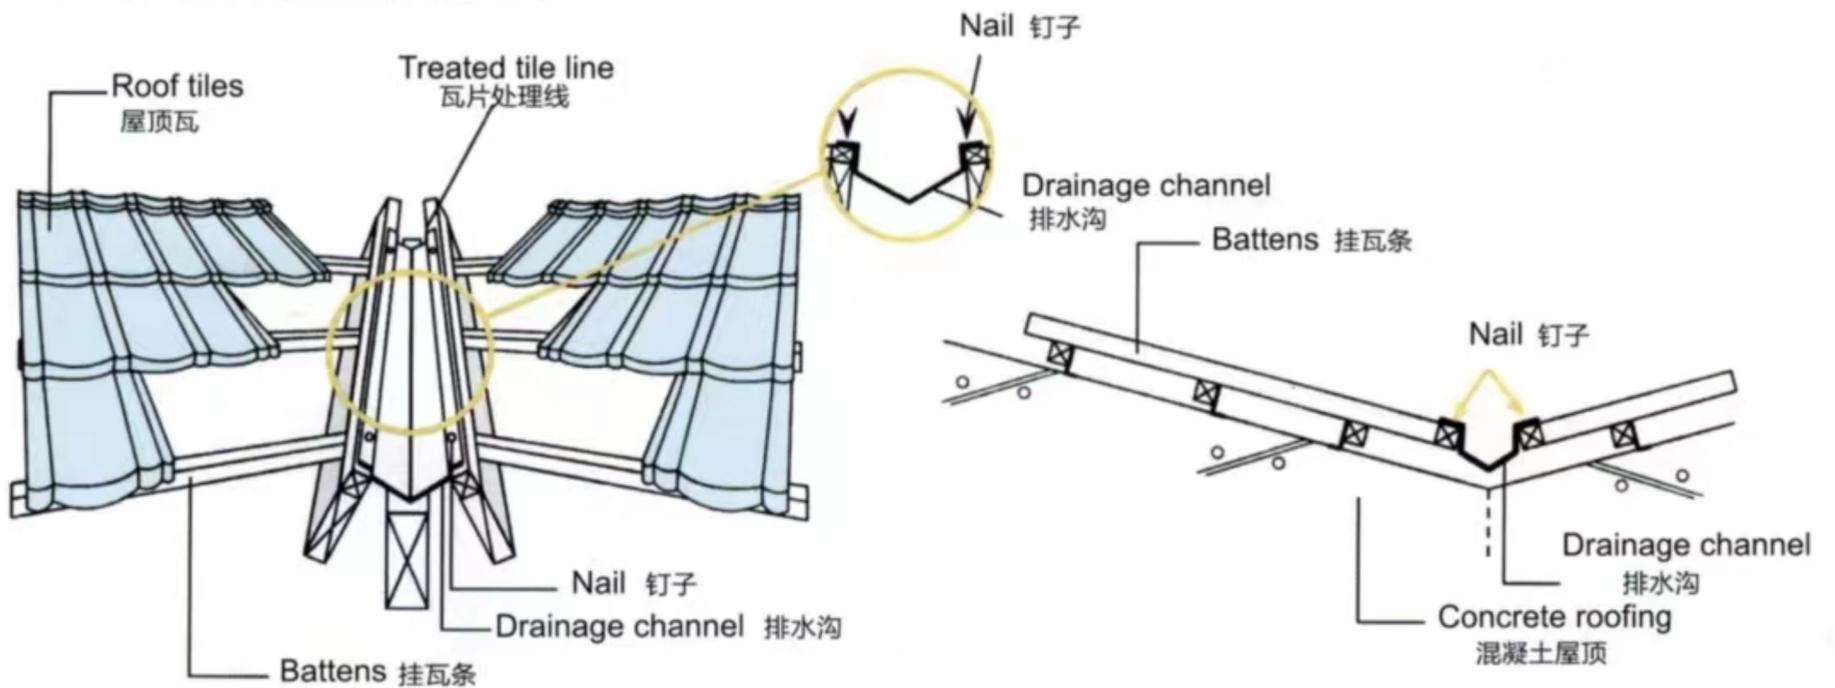


Profile Map 剖面图

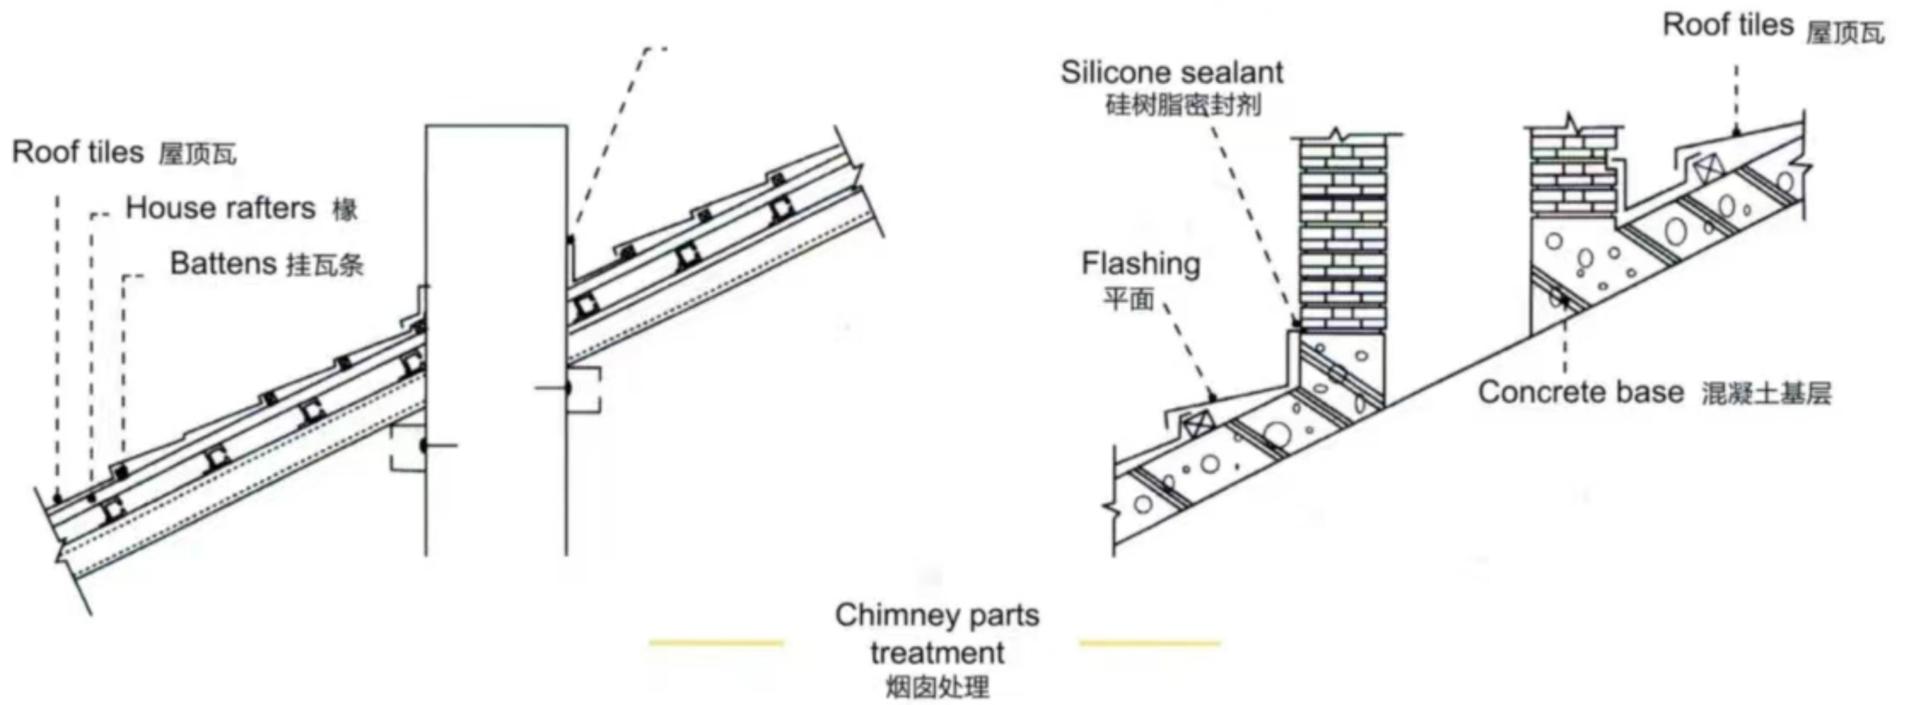


Window treatment 窗户处理


The Installation of Sandwich Structure 三合结构安装

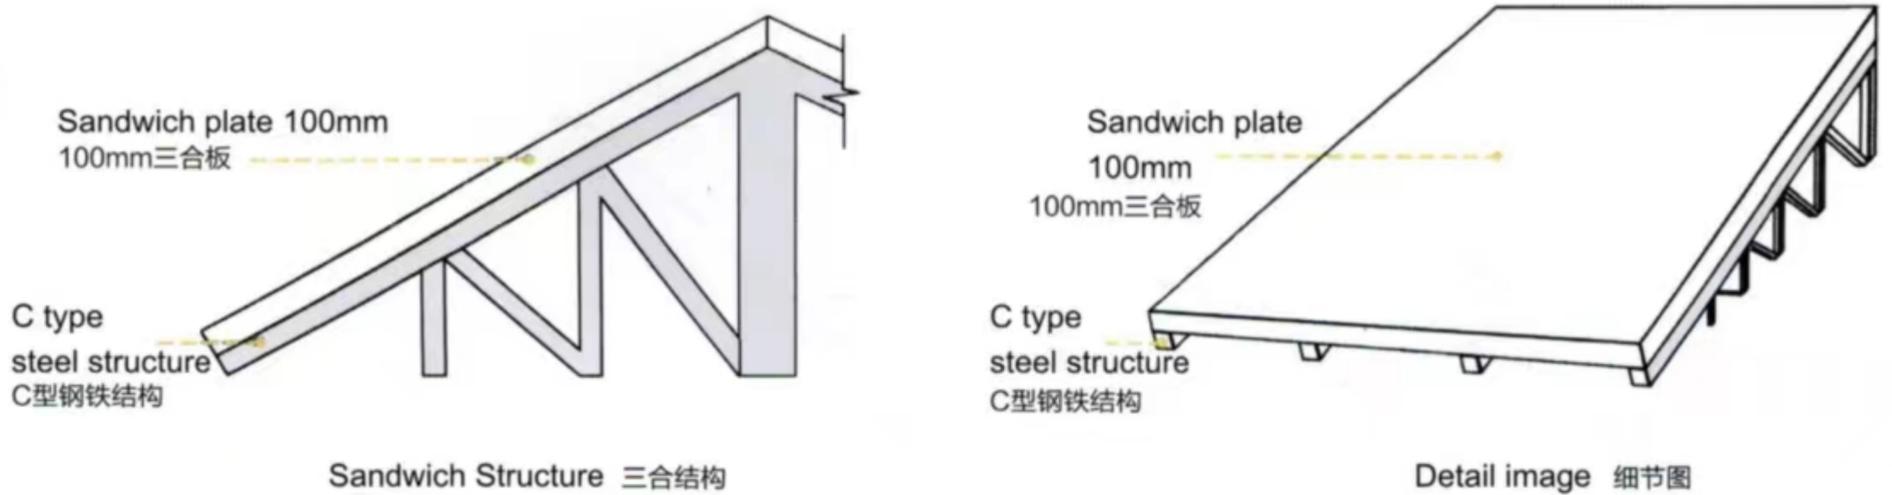

Angle Ridge Cap I
角型脊瓦 I

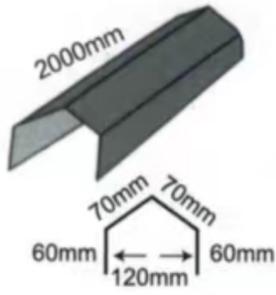


Angle Ridge Cap II
角型脊瓦 II

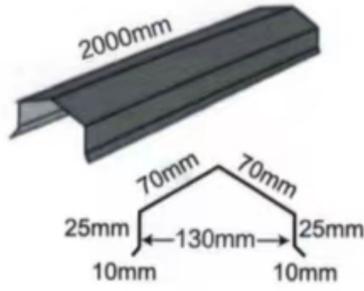


Angle Ridge Cap
角型小脊瓦




Square Ridge Cap
方型脊瓦

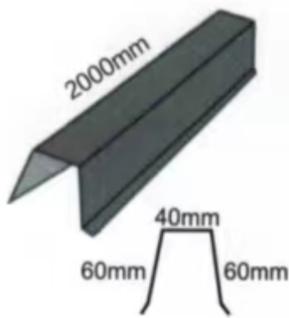


Circular Ridge Cap
圆型小脊瓦

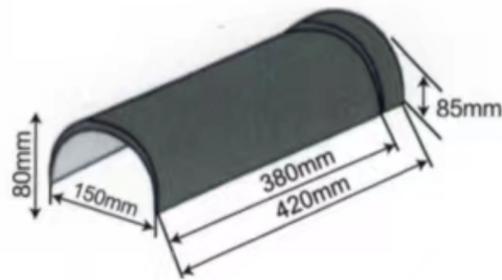


Valley Tray
天沟板

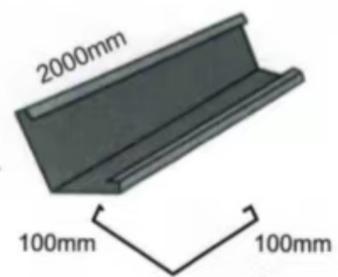


Wall Side Flashing
泛水板

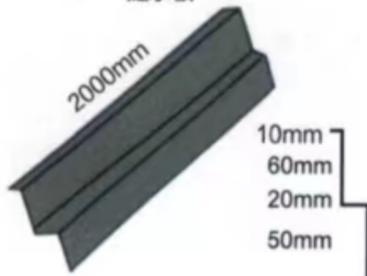


Barge Board Cover
山墙板

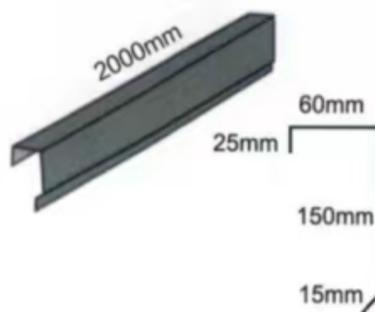


Eaves Flashing
檐板

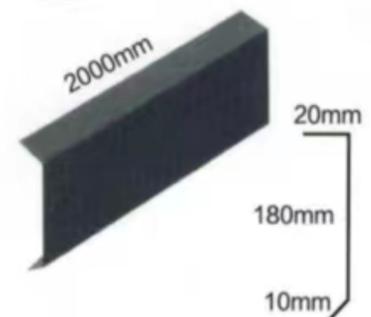

Flat Sheet I
平板 I

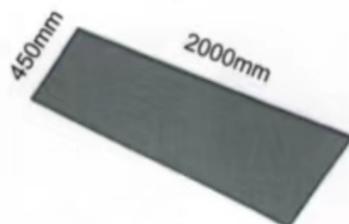

Flat Sheet II
平板 II

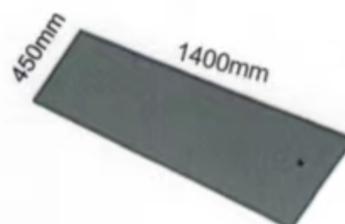

备注：特殊尺寸配件可订制


TIP: Special Accessories can be customized

Installation method of concrete roofing and wooden roofing


混凝土屋面和木制屋面的金属瓦安装方法




A. Roof and ridge plate 屋脊和脊板

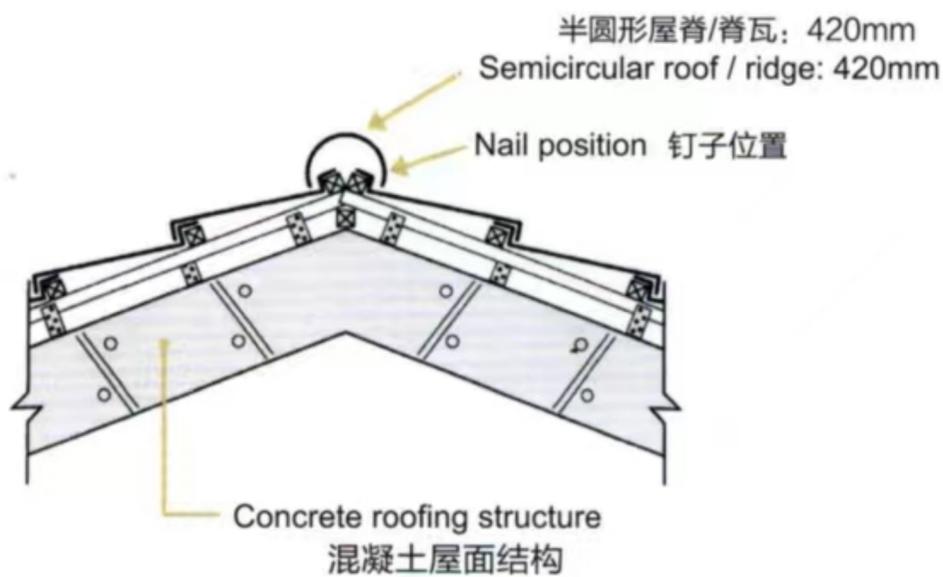

Installation of 420MM semicircular roof / ridge tile
420mm 半圆形屋脊/脊瓦安装

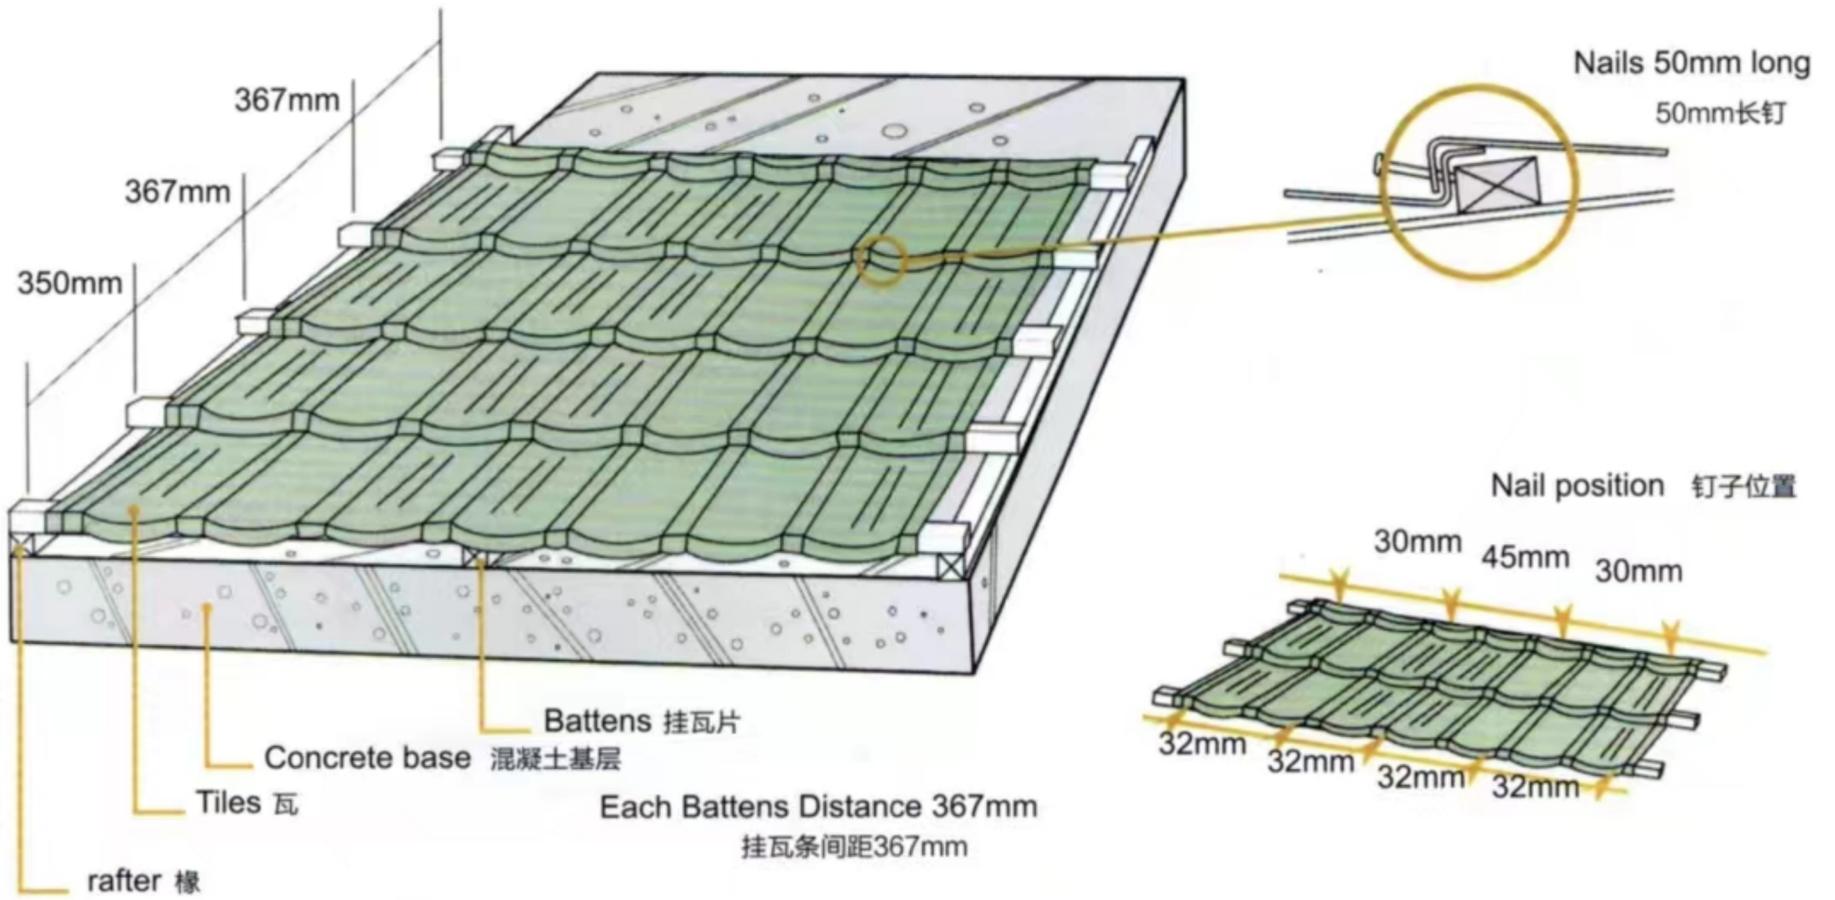


D. Eaves board water 屋檐落水

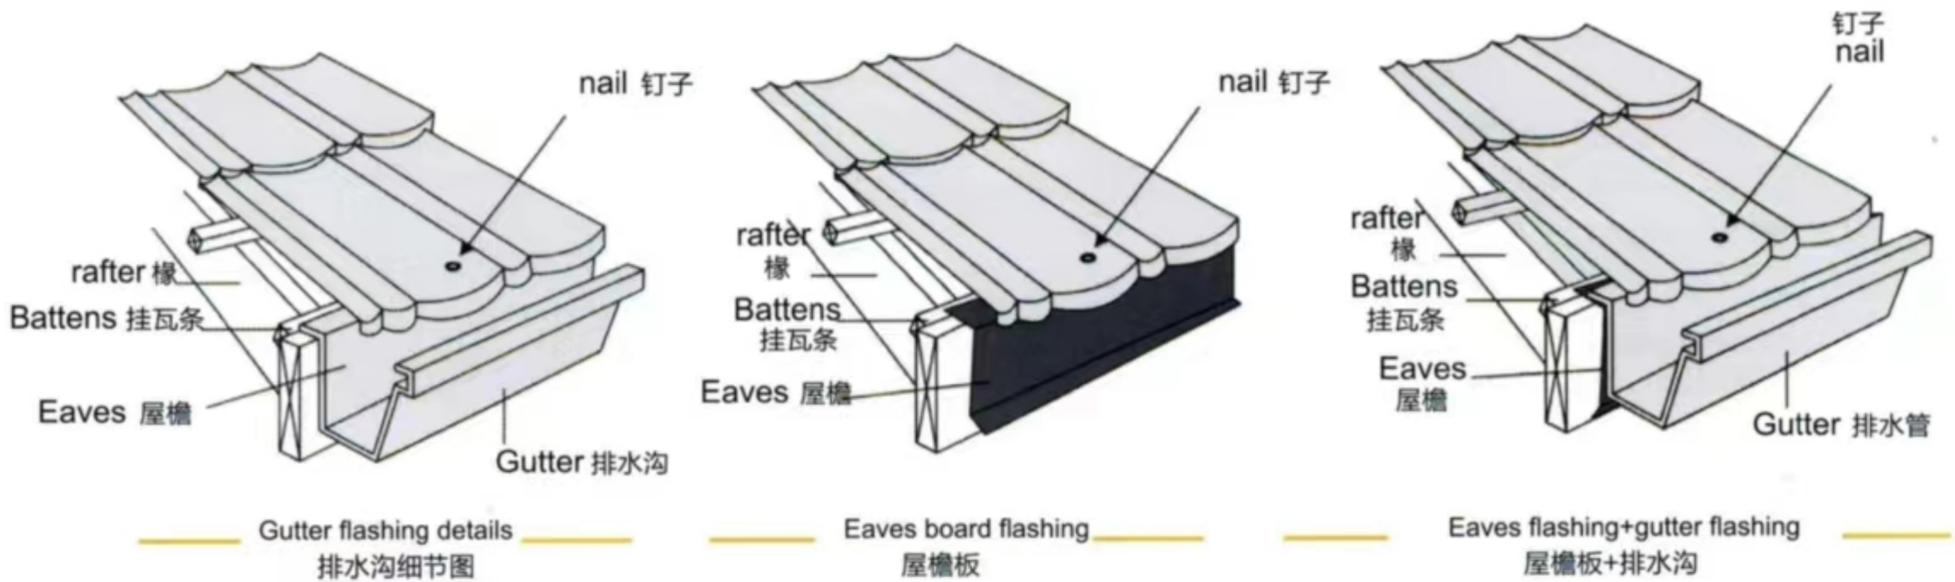

E. Gables 三角墙

Insert the top of the roof tile or a portion of the metal sheet into the flush panel
 将屋顶瓦顶端或金属片部分插入平嵌板

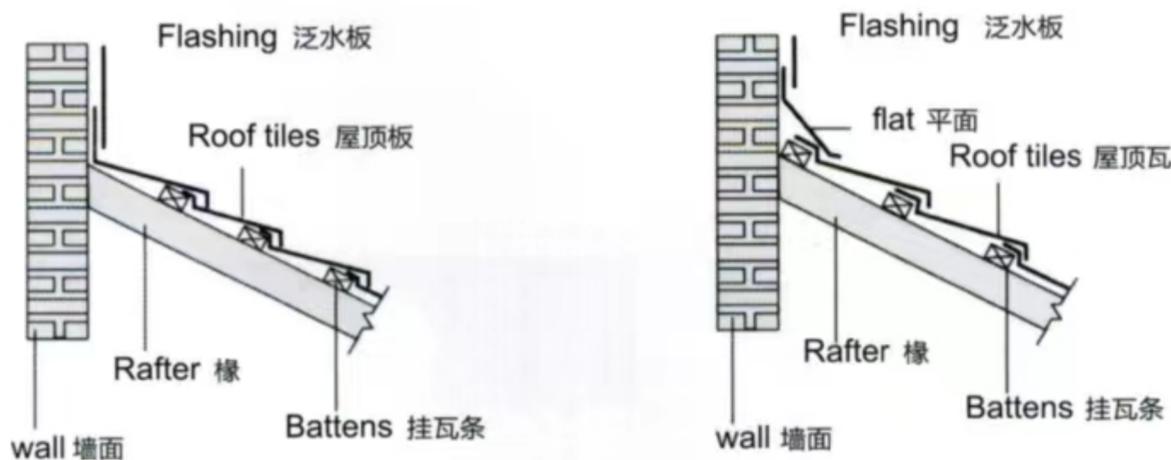

F. Vertical nodes 垂直接合:

- If the roof tiles has a vertical wall on one side, connect the roof tiles to the vertical wall, and then deal with the vertical wall surface with the water board.
- If there is water flowing between the roof tiles and the vertical wall, install a drain between the roof tiles and the vertical wall.

处理垂直墙面时, 将屋顶瓦固定在垂直墙面上, 再用劲防水板贴到墙面上
 如果墙面与瓦片之间有水流动, 需在其间安装排水管。